

PACKAGE CONTENTS

1. Tablet
2. USB Cable
3. AC Adapter (varies by country/region)
4. Quick reference guide (English & Arabic)
5. Warranty Card

WARRANTY & POLICY



Ctroniq provides 12-month free service for non-physical damage, such as the defects of product's design, manufacture and material.

Please visit www.ctroniq.co.uk to review our service policy and warranty details.

REGISTER YOUR DEVICE


Enjoy Extended Warranty please visit our website www.ctroniq.co.uk or drop an email at register@ctroniq.co.uk with your Full Name, Model Name & Serial Number.

BUTTONS & PORTS

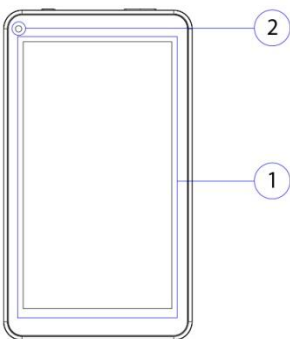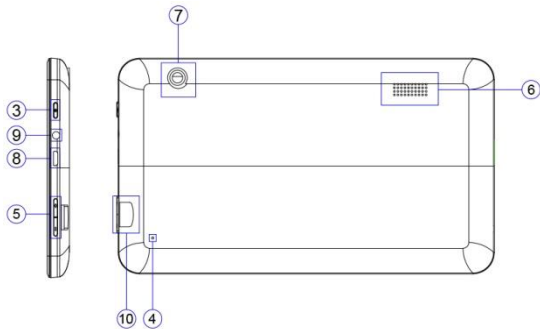
View	Label	Description
<p><i>Front</i></p> 	<p>1</p> <p>2</p>	<p>Screen</p> <p>Front Camera</p>
<p><i>Bottom</i></p> 	<p>3</p> <p>4</p> <p>5</p> <p>6</p> <p>7</p> <p>8</p> <p>9</p> <p>10</p>	<p>Power</p> <p>Reset</p> <p>Volume + /-</p> <p>Speaker</p> <p>Rear Camera</p> <p>USB Port</p> <p>3.5mm Earphone jack</p> <p>microSD Card slot</p>

SETUP YOUR TABLET

 - 1- To install the optional microSD, insert the memory card in the slot by pushing it in
- 2- Charge the battery
 - Before turning on your tablet PC please charge it fully with power charger
- 3- Peel off the screen mask before first use

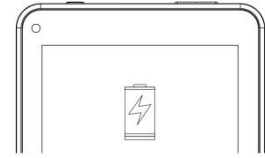

CUSTOMIZE YOUR TABLET

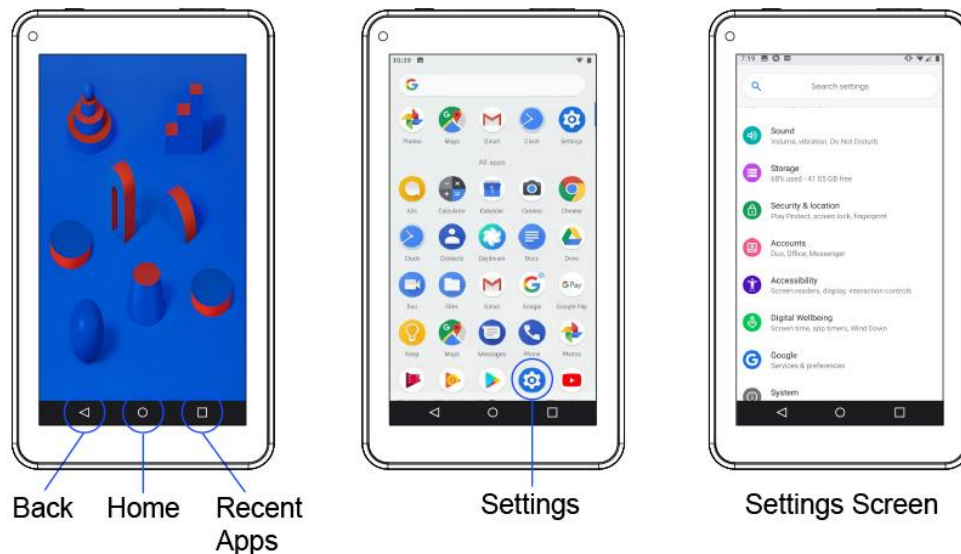 

From the home screen, tap **Setting** icon to customize your Tablet in any of the various ways:

Wireless & Networks

Manage connections between your tablet and a variety of networks and other devices.

Wi-Fi: Connect your tablet to a Wi-Fi network

Bluetooth: Allows you to pair your tablet to another Bluetooth-enabled device

Mobile networks: Control your device's access to networks and mobile data service

Display

Brightness : Customize the brightness levels of your tablet screen

Wallpaper: Change home and lock screen backgrounds

Security → Device Security

Screen Lock: Select screen lock type and set the security options.

Sound

Sounds: Configure custom ringtone, notification tones, camera, typing & screen touch indicative sounds.

Accounts

Accounts: Set up and manage accounts, including your Google account & email amongst others.

Add a Google account:

Setting up / Sign-in a Google™ account helps your fully utilize all the Android™ features within your new, portable device.

1. From Settings, tap Users & Accounts
2. Tap Add account > Google > Sign up / Sign In

Personal

Backup & Reset Options: Configure your device to backup data to your personal account(s)

SPECIFICATIONS

Processor	Display
RK3126C, Quad core,1.2Ghz	7 Inch, IPS
Memory	HD (1024 x 600px)
RAM (DDR3) 1 GB	P+G, 5 point touch screen
Storage	Integrated Devices
16 GB	Front Camera: 0.3M pixel
OS	Rear Camera: 2.0M pixel
Android 9.0 Go	High fidelity speaker (8Ω/1W) x1
Battery	Microphone x1
Rechargeable Li-polymer	Connectivity / Ports
3.7V/ 2200mAh	Bluetooth 2.1/4.0
AC Power Adapter	WiFi 802.11 b/g/n
Input : AC100~240V,50~60Hz	TF Card slot (up to 32GB)
Output Voltage : 5V/1.5A	Micro USB x1 (with OTG function)

ADDITIONAL HIGHLIGHTS

- Expandable memory (up to 32 GB)
- Multi users
- Play store
- App Permissions

REQUEST DIGITAL PRODUCT MANUAL

You may download the electronic version of the product manual from our website www.ctroniq.co.uk alternatively drop us an email on support@ctroniq.co.uk

CONTACT US

For aftersales support, feedback or further inquiries kindly reach out to us on our email info@ctroniq.co.uk or through our website www.ctroniq.co.uk