QUICK START GUIDE

PACKAGE CONTENTS

1. Tablet
2. USB Cable
3. AC Adapter (varies by country/region)
4. Quick reference guide (English & Arabic)
5. Warranty Card

WARRANTY & POLICY

Ctroniq provides 12-month free service for non-physical damage, such as the defects of product's design, manufacture and material.
Please visit www.ctroniq.co.uk to review our service policy and warranty details.

REGISTER YOUR DEVICE

Enjoy Extended Warranty please visit our website www.ctroniq.co.uk or drop an email at register@ctroniq.co.uk with your Full Name, Model Name & Serial Number.

BUTTONS & PORTS

View	Label	Description
Front 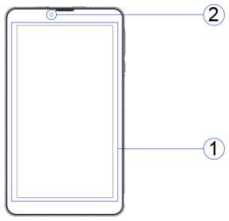	1 2	Screen Front Camera
Bottom 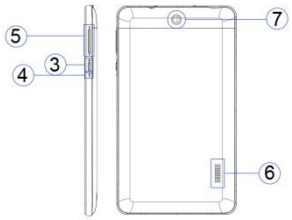	3 4 5 6 7	Power button Reset Volume + /- Speakers Back Camera
Cross-Section 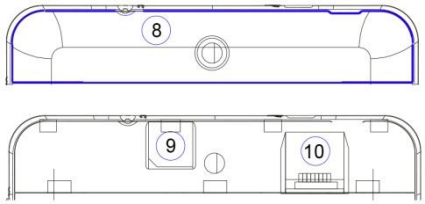	8 9 10	Cover MicroSD Card slot 3G Dual Sim slot

QUICK START GUIDE

SETUP YOUR TABLET

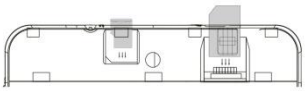

1- To install the optional microSD and 3G Sim card, remove the cover (refer to section view) and follow the below steps:

- Insert the microSD card into the card slot by pushing it
- Insert the single/dual 3G SIM card into the slots by pushing it

2- Charge the battery

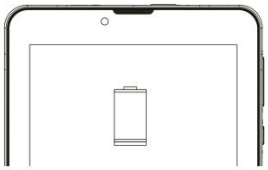

- Before turning on your tablet PC please charge it fully with power charger.

3- Peel off the screen mask before first use

CUSTOMIZE YOUR TABLET

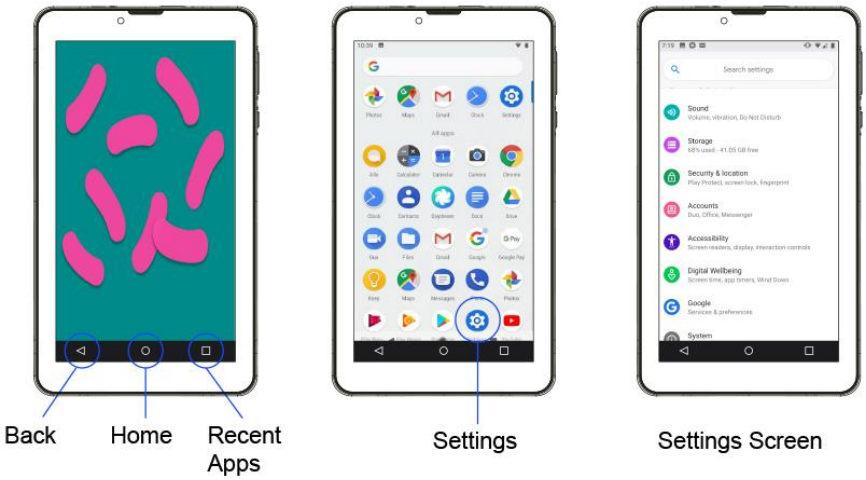

From the home screen, tap **Setting** icon to customize your Tablet in any of the various ways:

Wireless & Networks

Manage connections between your tablet and a variety of networks and other devices.

Wi-Fi: Connect your tablet to a Wi-Fi network

Bluetooth: Allows you to pair your tablet to another Bluetooth-enabled device

Mobile networks: Control your device's access to networks and mobile data service

Display

Brightness : Customize the brightness levels of your tablet screen

Wallpaper: Change home and lock screen backgrounds

Security → Device Security

Screen Lock: Select screen lock type and set the security options.

Sound

Sounds: Configure custom ringtone, notification tones, camera, typing & screen touch indicative sounds.

Accounts

Accounts: Set up and manage accounts, including your Google account & email amongst others.

Add a Google account:

Setting up / Sign-in a Google™ account helps your fully utilize all the Android™ features within your new, portable device.

1. From Settings, tap Users & Accounts
2. Tap Add account > Google > Sign up / Sign In

Personal

Backup & Reset Options: Configure your device to backup data to your personal account(s)

SPECIFICATIONS

Processor	**Integrated Devices**
MTK8321, ARM Cotex-A7, Quad CORE, 1.3 GHz	Front Camera: 0.3M pixel
Memory	Rear Camera: 2.0M pixel
RAM (DDR3) 1 GB	High fidelity speaker (8Ω/1W) x 1
Storage	Microphone x1
16 GB	**Connectivity / Ports**
Display	Bluetooth 4.0
7 Inch, IPS, HD (1024 x 600px)	WiFi 802.11 b/g/n
P+G, 5 point touch screen	3G Sim card slot
OS	TF Card slot (up to 32GB)
Android 9.0 Go	Micro USB x 1 (with OTG function)
Battery	**AC Power Adapter**
Rechargeable Li-polymer	Input : AC100~240V,50~60Hz
3.7V/ 2200mAh	Output Voltage : 5V/1.5A

ADDITIONAL HIGHLIGHTS

- Expandable memory (up to 32 GB)
- Multi users
- Play store
- App Permissions

REQUEST DIGITAL PRODUCT MANUAL

You may download the electronic version of the product manual from our website www.ctroniq.co.uk alternatively drop us an email on support@ctroniq.co.uk

CONTACT US

For aftersales support, feedback or further inquiries kindly reach out to us on our email info@ctroniq.co.uk or through our website www.ctroniq.co.uk